


Plantronics CS540 Battery Replacement Instructions

The **Plantronics CS540** battery #86180-01 (part # E10215) will initially provide 6-7 hours of continuous talk time. From normal usage, the battery charge time will diminish after years of use. It's a good idea to replace your battery every year or two or when you notice a significant decrease in talk time. Replacing the battery will maximize your talk time with your *CS540* and only takes a few minutes.

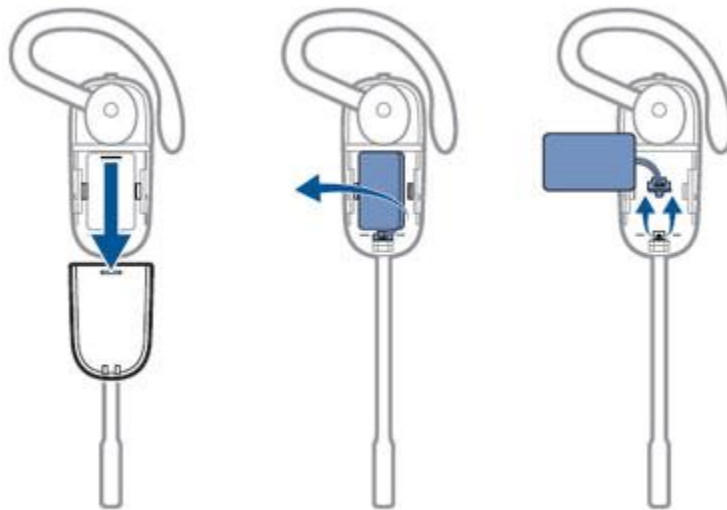

- 1) Slide the battery cover down and away from the speaker. This will remove the battery cover.
- 2) With your thumb and index finger, pull the battery out from the plastic tabs located on each side of the battery.
- 3) Now grasp the white battery connector and pull away from the **CS540 headset**.
- 4) Next reverse the previous steps to install your replacement battery.

When finished with installation, place your *CS540 headset* back into the docking cradle to charge. After a few hours your **CS540 headset** will be fully charged and ready for use.