


Counter Teller Timer Relay For use with IRT-5000

Installation and Connection

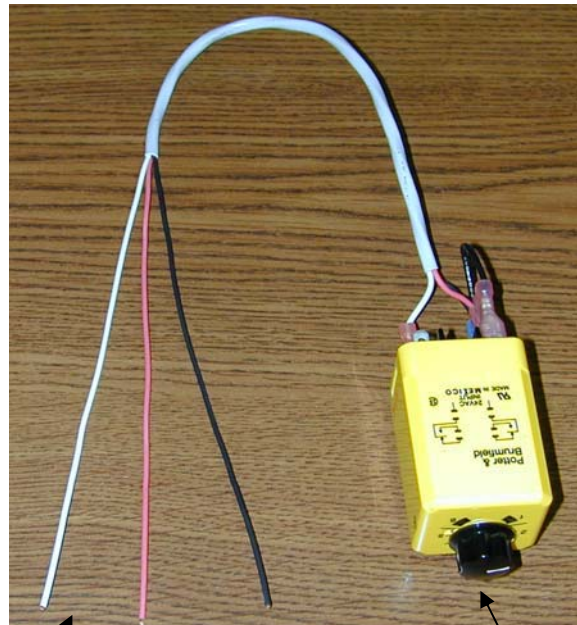

Field Connections

Black - #2 Terminal on Counter Teller
White - #20 Terminal on Counter Teller
Red - #8 Terminal on IRT5000 Control Unit

Timer Setting

Set timer to the #1 mark.
Make sure this time is less than turbine run time.

This timer relay is needed when a Counter Teller unit is used with an IRT-5000 unit. The timer's purpose is to break the teller send circuit after the teller send button is pressed, before the turbine stops running. Connect this timer as shown above inside the counter teller unit so that when the teller send is activated, this timer is also activated and it breaks the circuit going to the IRT5000.

