

INSTRUCTIONS FOR ADJUSTING TELLER CALL TONE TYPE & VOLUME

1. Press **LANE 1** key while pressing **HOLD** key. Lane 1 and 2 indicators light orange.
2. Press **LANE 2** to rotate through the call tone types until desired tone is heard.
3. Press **LANE 1** to rotate through the volume levels until the desired level is reached.
4. Press **▼** key to select a single call tone or continuously repeating tones.
5. Press **HOLD**. System is ready for use.