


STANDARD 10 SECOND MAXIMUM RUN TIME SETTINGS

LONG RUN 60 SECOND MAXIMUM RUN TIME SETTINGS

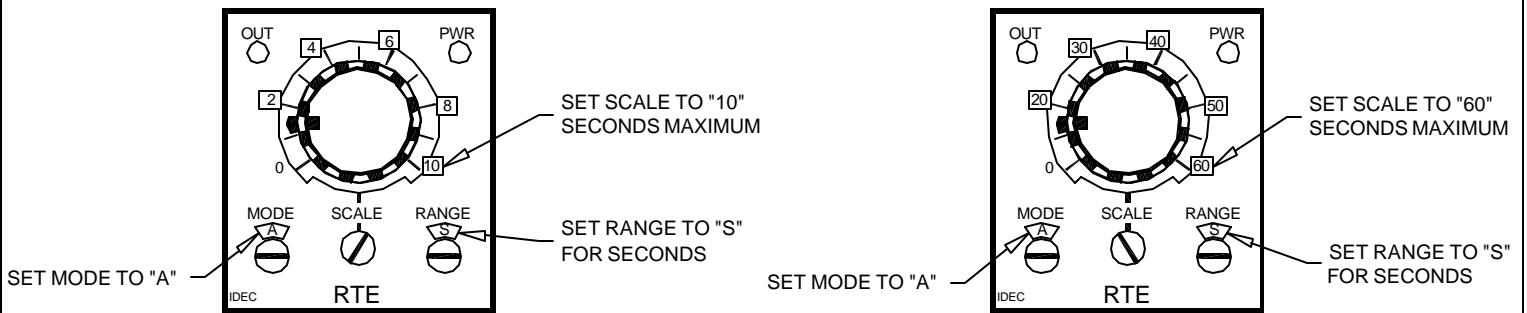

MODE = ALWAYS SET MODE TO "A"

RANGE = SET RANGE TO "S" FOR SECONDS

SCALE = SET SCALE TO THE DESIRED MAXIMUM RUN TIME.
TYPICALLY SET TO EITHER 10 OR 60 SECONDS.

MAKE ALL ADJUSTMENTS CAREFULLY, FORCING ADJUSTMENTS WILL DAMAGE THE TIMER.
ADJUST SCALE SO ALL NUMBERS ARE READABLE AND STRAIGHT. THE SCALE ADJUSTMENT
SHOULD CLICK INTO EACH SETTING. THE MAXIMUM SCALE VALUES INCLUDE 1, 3, 10, 30, AND 60.