



To adjust the spring assist mechanism:

- 1) Open hopper and close it slowly until you hear the first detent drop. Let the hopper sit on this detent while adjusting assist mechanism.
- 2) Move the rear anchor bolt so there is EQUAL spring force opening the hopper and closing the hopper.
 - a) Move the anchor point UP for more OPENING force.
 - b) Move the anchor point DOWN for more CLOSING force.
- 3) Adjust overall spring force by adjusting the jam nuts.
 - a) Tighten jam nuts for more overall spring assist
 - b) Loosen jam nuts for less overall spring assist.
- 4) Tighten jam nuts together and rear anchor point when finished adjusting.

| | | | | |
|--|---|--|---|----------------------------------|
| est. 1967 HAMILTON CUSTOM MADE SECURITY | <small>PROPRIETARY AND CONFIDENTIAL THESE DRAWINGS ARE THE PROPERTY OF HAMILTON SAFE CO. AND SHALL NOT BE REPRODUCED, COPIED, USED AS THE BASIS FOR MANUFACTURE OR SALE OF APPARATUS WITHOUT PERMISSION</small> | | <small>TITLE</small> Assist Adjustment, Oakley Night Depository Head | |
| | <small>PART NUMBER</small> OAK-ASST-ADJ | | <small>DRAWN BY</small> BilDef | <small>DATE</small> 9/21/2022 |