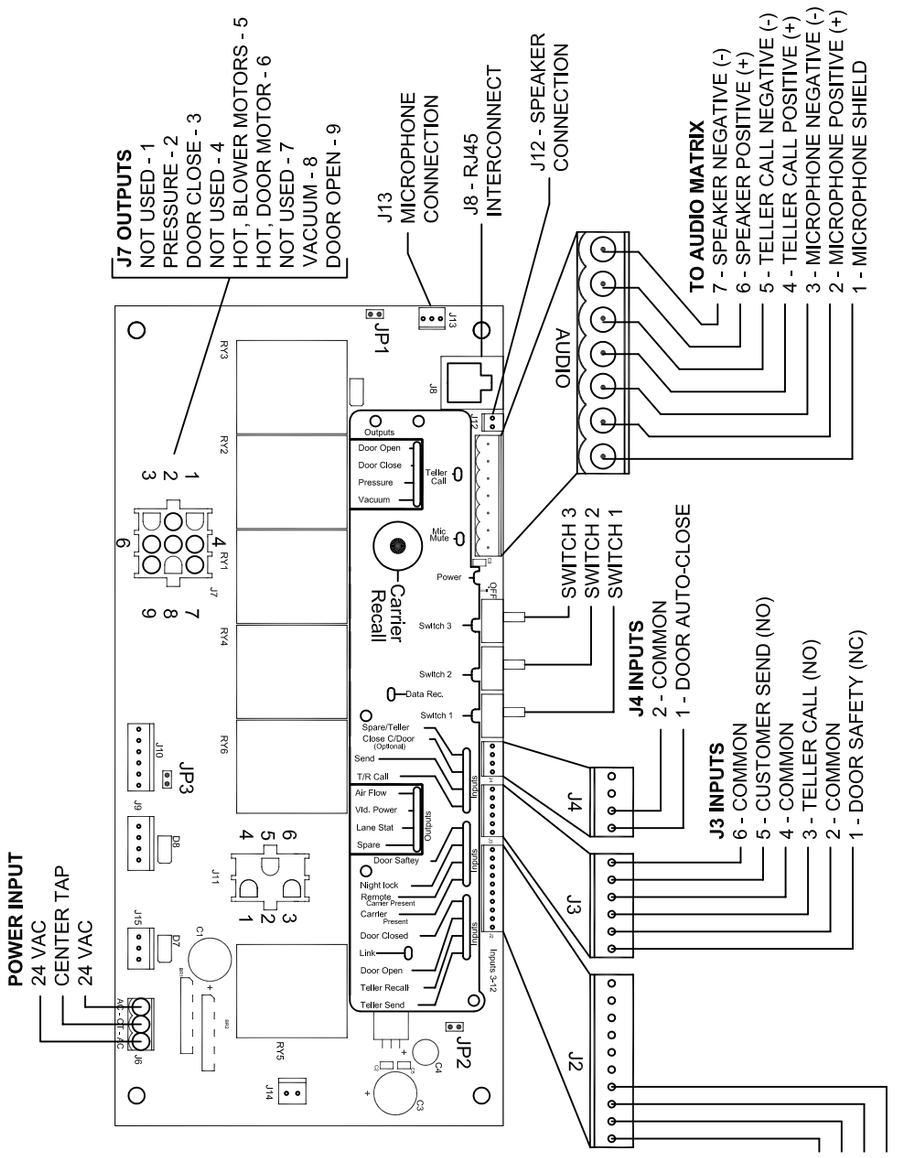

J8 - RJ45 INTERCONNECT

WIRE	PIN #	TELLER CONNECTIONS
WHITE / ORANGE	1	SPARE
ORANGE	2	TELLER NIGHT LOCK
WHITE / GREEN	3	TELLER CARRIER ARRIVAL
BLUE	4	TELLER RECALL
WHITE / BLUE	5	TELLER DOOR CLOSED / TELLER SEND
GREEN	6	COMMON
WHITE / BROWN	7	RS485 A
BROWN	8	RS485 B

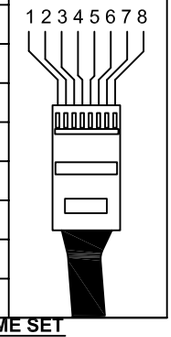

AUTO DOOR CLOSE FUNCTION
THE UNIT CAN BE SET SO THE DOOR WILL AUTOMATICALLY CLOSE AFTER THREE MINUTES OF INACTIVITY. PRESSING EITHER CUSTOMER SEND OR TELLER CALL WILL OPEN THE DOOR.

J4 INPUT - PINS #1 AND #2
JUMPER (ON) FOR AUTO DOOR CLOSE
JUMPER (OFF) FOR NORMAL OPERATION

MICROPHONE MUTING:
1) RECALL CARRIER TO CUSTOMER UNIT. (PRESS SW4 "RECALL" LOCATED ON CONTROL BOARD)
2) PRESS AND HOLD SW4 AND PRESS THE TELLER CALL BUTTON ON CUSTOMER UNIT. THE OUTPUT LED FOR MICROPHONE MUTE WILL FLASH.
   ONE FLASH = SET TO MUTE.
   TWO FLASHES = SET TO NOT MUTE.
3) REPEAT STEP #2 TO TOGGLE BETWEEN SETTINGS AS NEEDED.
   • (NOTE: SW4 AND TELLER CALL MUST BE RELEASED TO TOGGLE SETTING.)

BLOWER RUN TIME SET

TO RESTORE DEFAULT BLOWER RUN TIMES:
1) TURN POWER "OFF" TO UNIT.
2) TURN SW1 "ON".
3) TURN POWER "ON" TO UNIT.
4) WAIT 10 SECONDS BEFORE PROCEEDING.
5) RETURN SW1 TO "OFF".
6) DEFAULT BLOWER RUN TIME IS RESTORED.

SETTING PROCEDURE
1) BEFORE BEGINNING, THE CARRIER MUST BE IN CUSTOMER UNIT WITH CUSTOMER DOOR OPEN.
2) TURN SW1 TO THE "ON" POSITION. (LED INDICATOR WILL LIGHT)
3) PUSH AND HOLD EITHER "CUSTOMER SEND" OR "TELLER RECALL" BUTTON UNTIL CARRIER ARRIVES IN THE TELLER UNIT. RELEASING BUTTON STORES THE TIME FOR THIS CYCLE.
4) TURN SW1 TO THE "OFF" POSITION TO STORE THE CYCLE TIME FOR BOTH DIRECTIONS.

CONTROL BOARD COMPONENT DESCRIPTION AND FUNCTION

SW1 SWITCH 1: **BLOWER RUN TIME SET.** "OFF" IS NORMAL SETTING.
SW2 SWITCH 2: **TURBINE MODE.** "OFF" IS NORMAL SETTING.
SW3 SWITCH 3: **UNIT SELECTION.** "OFF" IS NORMAL SETTING.
SW4 SWITCH 4: **RECALL SWITCH.**

JP1 JUMPER 1: **MULTIPLE BOARD JUMPER.** JUMPER "ON" FOR NORMAL OPERATION IN SYSTEM WITH MANUAL TELLER UNIT.
JP2 JUMPER 2: **REMOTE INPUT JUMPER.** JUMPER "ON" FOR NORMAL OPERATION IN SYSTEM WITH MANUAL TELLER UNIT.
JP3 JUMPER 3: **DOOR MOTOR AUXILIARY THERMAL PROTECTION JUMPER.** JUMPER "ON" FOR NORMAL OPERATION IN ALL SYSTEMS EXCEPT HA33.