

# HAMILTON SAFE®

3143 Production Drive • Fairfield, Ohio 45014 • 513-874-3733

## Night Depository Identification Guide

### Table of Contents

#### ----- Page 2 -----

Allied – Nightwatch Dual  
American Vault – Model 85  
Chubb – Citadel  
Collier – ND1000  
Collier – ND2000 / ND2010  
Diebold – Eagle Bag Only

#### ----- Page 3 -----

Diebold – Eagle 103 Dual Flush  
Diebold – Eagle 103 Dual Recessed  
Diebold – Polaris Flush  
Diebold – Polaris Flush Bag Only  
Diebold – Polaris Recessed  
Diebold – Securomatic

#### ----- Page 4 -----

Diebold - Cashgard  
Fortis – AHD-106  
Fortis – AHDR-506  
Hamilton – 68F  
Hamilton – 67R  
Hamilton – 68B

#### ----- Page 5 -----

Lefebure – 101  
Lefebure – 201  
Lefebure – 312  
Lefebure – 412  
Lefebure – 577  
Lefebure – 612

#### ----- Page 6 -----

Mosler – American  
Mosler – C77-DF  
Mosler – C77-DR  
Mosler – C77-ER  
Mosler – Century  
Mosler – Magna Dual

#### ----- Page 7 -----

Mosler – Universal  
National – Flush  
National – Recessed  
Security Corporation – ND-11  
SSE  
SSE – Replacement

#### ----- Page 7 -----

Kumahira – ND-61  
Securifort



Model: Hamilton – 80UC



Model: Hamilton – 98RH



**Model:** Allied – Nightwatch Dual  
**Replace with:** 98RH  
**Kit:** 96-440  
**Instructions:** N/A



**Model:** American Vault – Model 85  
**Replace with:** 80UC  
**Kit:** B6883  
**Instructions:** N/A



**Model:** Chubb / Diebold – Citadel  
**Replace with:** 80UC  
**Kit:** N/A  
**Instructions:** N/A



**Model:** Collier – ND1000  
**Replace with:** 98RH  
**Kit:** 96-449  
**Instructions:** N/A



**Model:** Collier – ND2000 / ND2010  
**Replace with:** 80UC  
**Kit:** 96-475  
**Instructions:** N/A



**Model:** Diebold – Eagle Bag Only  
**Replace with:** 98RH  
**Kit:** NONE NEEDED  
**Instructions:** N/A



**Model:** Diebold – Eagle 103 Dual Flush  
**Replace with:** 98RH  
**Kit:** NONE NEEDED  
**Instructions:** Doc #08-326



**Model:** Diebold – Eagle 103 Dual Recessed  
**Replace with:** 98RH  
**Kit:** N/A  
**Instructions:** N/A



**Model:** Diebold – Polaris Flush  
**Replace with:** 98RH  
**Kit:** B6358  
**Instructions:** Doc #08-325



**Model:** Diebold – Polaris Flush Bag Only  
**Replace with:** 98RH  
**Kit:** NONE NEEDED  
**Instructions:** N/A



**Model:** Diebold – Polaris Recessed  
**Replace with:** 98RH  
**Kit:** B6406  
**Instructions:** N/A



**Model:** Diebold – Securomatic  
**Replace with:** 80UC ( 98RH )  
**Kit:** 96-451 ( B10374 )  
**Instructions:** Doc #08-323



**Model:** Diebold – Cashgard  
**Replace with:** 80UC  
**Kit:** B6883  
**Instructions:** N/A



**Model:** Fortis – AHD-106  
**Replace with:** 80UC  
**Kit:** N/A  
**Instructions:** N/A




**Model:** Fortis – AHDR-509  
**Replace with:** 98RH  
**Kit:** N/A  
**Instructions:** N/A



**Model:** Hamilton Safe – 68F  
**Replace with:** 98RH  
**Kit:** N/A  
**Instructions:** N/A



**Model:** Hamilton Safe – 67R  
**Replace with:** 98RH  
**Kit:** N/A  
**Instructions:** N/A

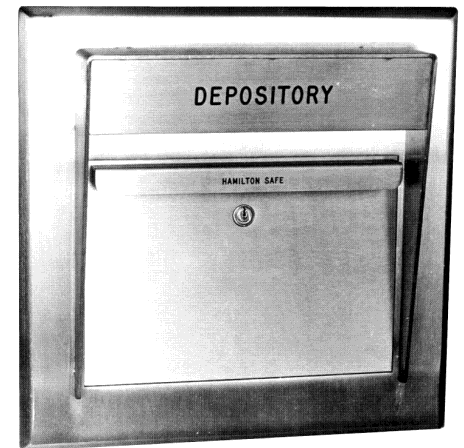

**Model:** Hamilton Safe – 68B  
**Replace with:** 98RH  
**Kit:** N/A  
**Instructions:** N/A



**Model:** Lefebure – 101  
**Replace with:** 98RH  
**Kit:** N/A  
**Instructions:** N/A



**Model:** Lefebure – 201  
**Replace with:** 98RH  
**Kit:** N/A  
**Instructions:** N/A



**Model:** Lefebure – 312  
**Replace with:** N/A  
**Kit:** N/A  
**Instructions:** N/A



**Model:** Lefebure – 412  
**Replace with:** 80UC  
**Kit:** B6883  
**Instructions:** N/A



**Model:** Lefebure – 577  
**Replace with:** N/A  
**Kit:** N/A  
**Instructions:** N/A



**Model:** Lefebure – 612  
**Replace with:** 98RH  
**Kit:** B6357  
**Instructions:** Doc #08-327



**Model:** Mosler – American  
**Replace with:** 98RH  
**Kit:** B6379  
**Instructions:** Doc #08-328



**Model:** Mosler – C77-DF  
**Replace with:** 98RH  
**Kit:** B6387  
**Instructions:** Doc #08-329



**Model:** Mosler – C77-DR  
**Replace with:** 98RH  
**Kit:** B6394  
**Instructions:** Doc #08-330



**Model:** Mosler – C77-ER  
**Replace with:** N/A  
**Kit:** N/A  
**Instructions:** N/A



**Model:** Mosler – Century  
**Replace with:** 98RH  
**Kit:** 96-470  
**Instructions:** Doc #08-331



**Model:** Mosler – Magna Dual  
**Replace with:** 80UC  
**Kit:** 96-450  
**Instructions:** N/A



**Model:** Mosler – Universal  
**Replace with:** N/A  
**Kit:** N/A  
**Instructions:** N/A



**Model:** National – Flush  
**Replace with:** 98RH  
**Kit:** N/A  
**Instructions:** N/A



**Model:** National – Recessed  
**Replace with:** 98RH  
**Kit:** N/A  
**Instructions:** N/A



**Model:** Security Corporation – ND-11  
**Replace with:** 98RH  
**Kit:** 96-448  
**Instructions:** N/A



**Model:** SSE  
**Replace with:** 80UC  
**Kit:** N/A  
**Instructions:** N/A



**Model:** SSE – Replacement Head  
**Replace with:** N/A  
**Kit:** N/A  
**Instructions:** N/A



**Model:** Kumahira – ND-61  
**Replace with:** N/A  
**Kit:** N/A  
**Instructions:** N/A



**Model:** Securifort  
**Replace with:** N/A  
**Kit:** N/A  
**Instructions:** N/A