


B10018 RECEIPT CLIP RETRO FIT KIT

FOR LEXAN CARRIER B6594

KIT CONTENTS:

- 1) RECEIPT CLIP
- 2) RECEIPT CLIP RETAINER
- 3) DRILL TEMPLATE
- 4) 2 6-32 X 1/2 " PHILLIPS TRUSS HEAD SCREWS
- 5) 2 6-32 NYLON NUS

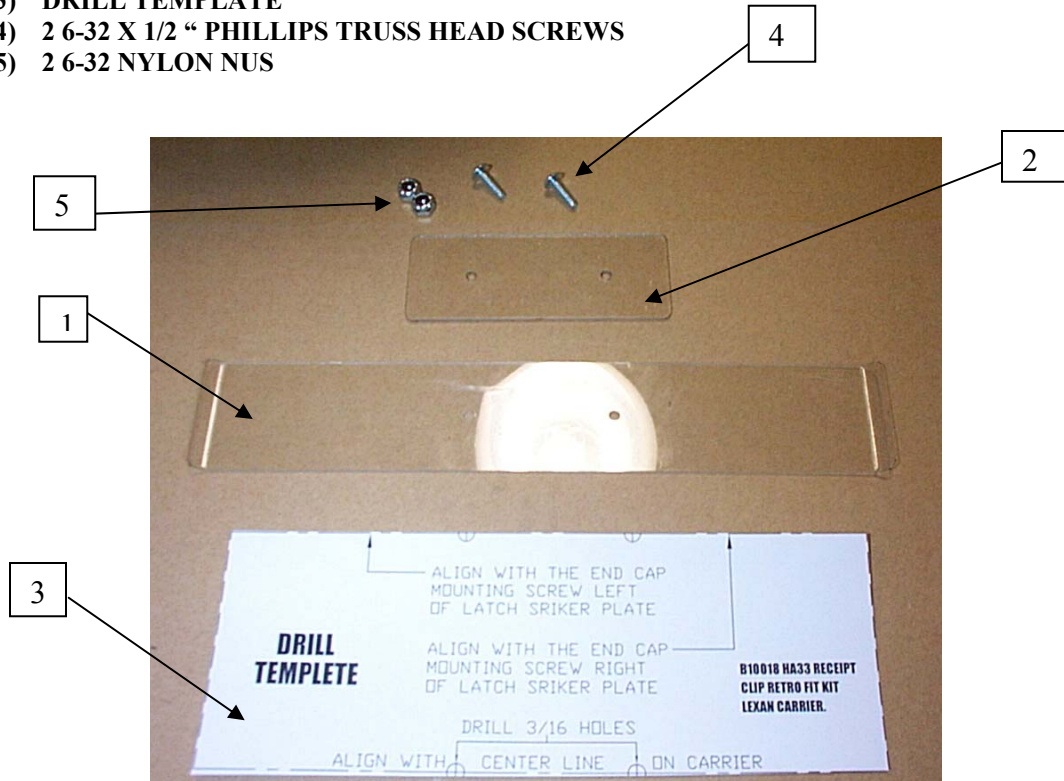

INSTRUCTIONS:

- 1) REMOVE CARRIER FROM SYSTEM AND OPEN CARRIER LID WITH THE RECEIPT CLIP ON THE LID AND REMOVE THE CLIP.
- 2) LOCATE THE LATCH SIDE OF CARRIER AND ON THE OUTSIDE OF CARRIER MOUNT THE DRILL TEMPLATE OF THE CARRIER CENTER BODY.

LATCH SIDE OF CARRIER



- 3) CENTER PUNCH THE 2 MARKED 3/16" HOLE WHICH SHOULD BE ON THE CENTER LINE OF CARRIER AND DRILL THE 2 3/16" HOLES AND DEBUR.



- 4) REMOVE THE 2 NUTS FOR THE NEW RECEIPT CLIP AND MOUNT THE RECEIPT CLIP FROM THE INSIDE OF CARRIER PUSHING THE 2 SCREW THROUGH TO THE OUTSIDE OF CARRIER AND RE-MOUNT THE 2 NUTS TO THE SCREW AND TIGHTEN THE NUTS TILL THEY ARE SNUG.



- 6) REINSTALL CARRIER IN UNIT SO THAT THE FAT END OF THE GAS SPRING IS UP WHEN CARRIER IS SETTING IN THE CUSTOMER UNIT.

FAT END OF GAS SPRING UP AT CUSTOMER END.



RECEIPT CLIP INTENDED FOR TELLER USE ONLY TO GIVE RECEIPT BACK TO THE CUSTOMER. CUSTOMER WILL BE LESS LIKELY TO USE THE CLIP SINCE THEY CAN'T SEE THE CLIP.

