


Rev - 1 --

Rev - 2 --

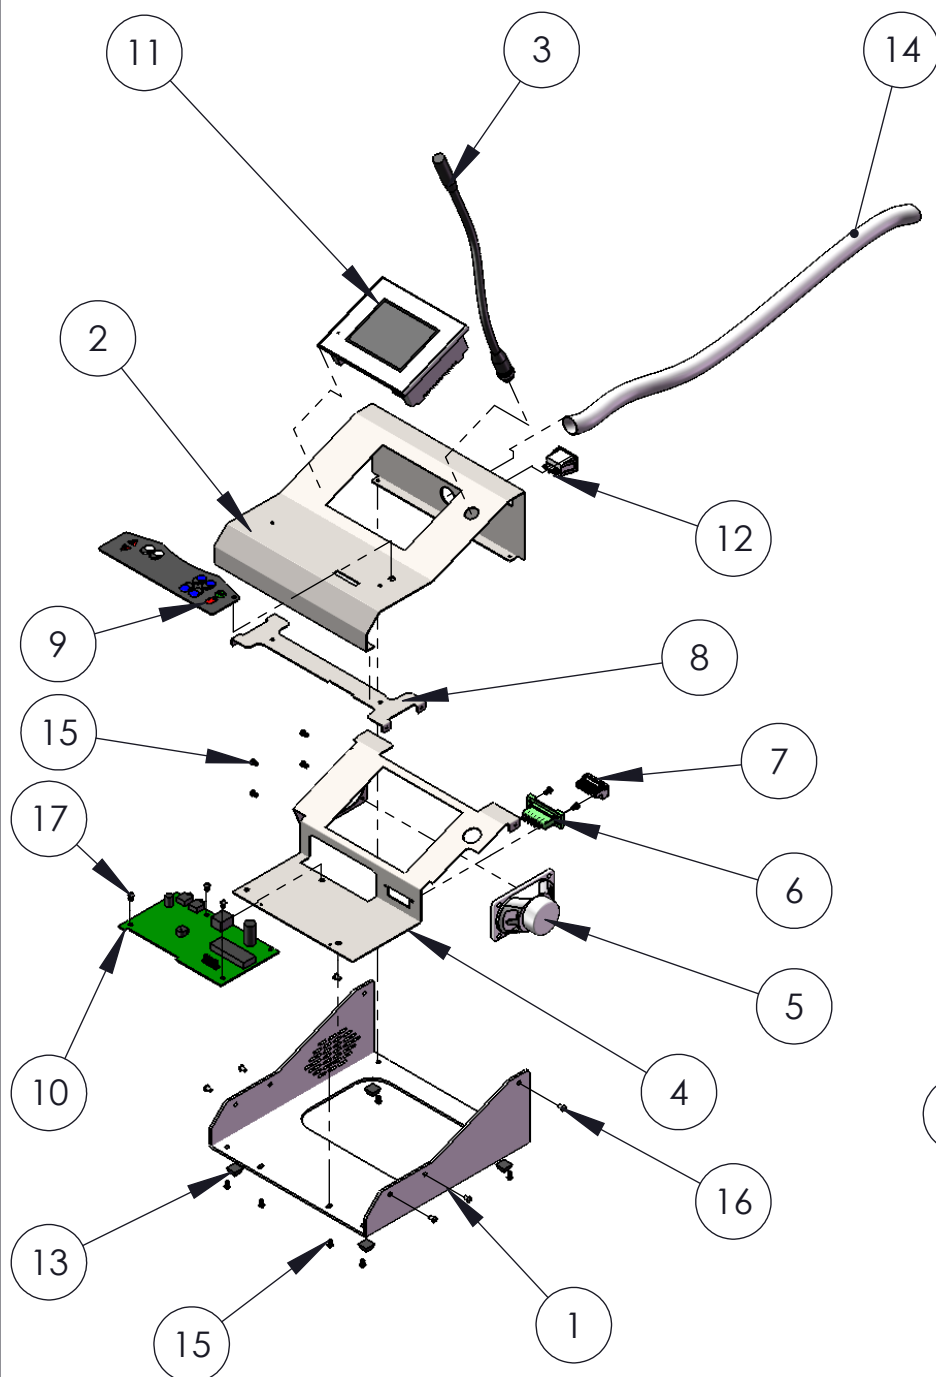

Entrance Control Touch Screen Console

Reference	Part Number	Drawing Number	Description	Qty
1	B10167	TSC-002	Touch Screen Operator's Console Base	1
2	B10168	TSC-001	Touch Screen Operator's Console Top Stainless Steel	1
3	E0605	*****	Gooseneck Microphone	1
4	B10169	TSC-003	Touch Screen Inside Mounting Plate	1
5	E0721	*****	2 x 3 Speaker	1
6	E6032	*****	Panel Mount Female, 6 Position (Phoenix # 707280)	1
7	E6033	*****	Male Plug, 6 Position (Phoenix #1781027)	1
8	B10170	TSC-004	Touch Screen Keypad Bracket	1
9	E0895	*****	Keypad 5501 Membrane (same As 701-20006-5000)	1
10	5001-CB	*****	Audio Console Board	1
11	E1002	*****	3.8" Touch Screen AGP 3200T	1
12	E10071	*****	Red Rocker Power Switch (NKK-JWM11RC1A/UCV)	1
13	B10171	*****	Rubber Base Feet (McMaster-Carr #9723K89)	4
14	E10072	*****	3/4" Split Convuluted Sleeving or Wire Loom (7840K35)	1
15	Purchase Local	*****	6-32 X 1/4" SST Phillips Truss Head Screw	12
16	Purchase Local	*****	6-32 X 1/4" Black Button Socket Cap Screw	6
17	Purchase Local	*****	6-32 X 1/4" R.H. Screw	3
18	B10016	96-289	Complete Touch Screen Console	1



HAMILTON

2010 ECS TOUCH SCREEN CONSOLE

EXPLODED VIEW DRAWING

PART NUMBER : B10016

Drawing Number : 96-290

Date : 12-7-2009